




CROSSBOW


ACK-AT1775

SAFE AND SECURE FOR AMD


► AM2 & AM3 / K8 Installation

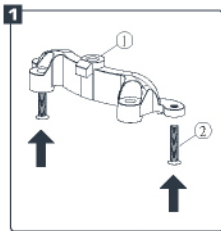


Fasten the screw (2) from bottom to top) onto AMD RM Base-Nut (1)

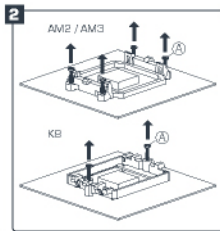


Take off the original RM & Screw (A) from the main board, then place the AMD RM Base-Nut Ass'y (1) + (2) onto main board.

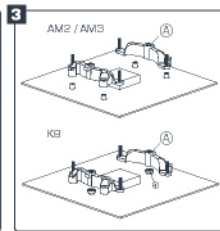


If it is an AMD KB main board, while installation, place the PC-washer (4) onto the bottom of AMD RM Base-Nut Ass'y.

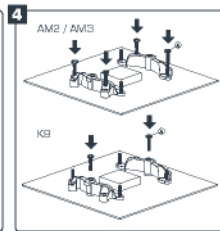

Fasten screws (A), which is originally with original RM, and AMD RM Base-Nut Ass'y onto main board.

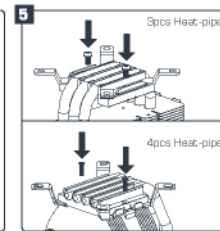

Fasten the LGA775 Clip and Clip screw onto the bottom side of the heat-sink.

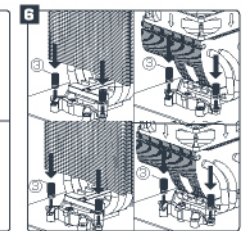

Aim the holes of LGA775 clip to the screw of AMD RM Base-Nut Ass'y, then fasten the M3 Spring-Nut (3) to the screw until the heat-sink is secured.